

IMPORTANT!


Follow these steps to avoid ripping screens.

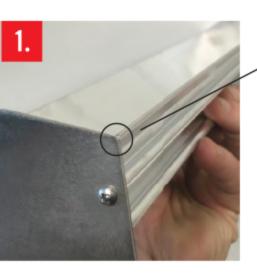

Ensure your end cap is positioned flush with the coating edge so the end cap does not stick out beyond the coating edge.

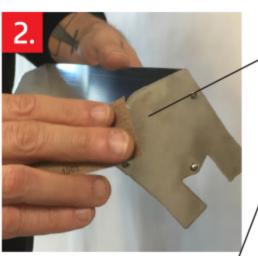

Use sand paper to aggressively sand down the edges of the end cap and where the end cap connects with the coating edge.

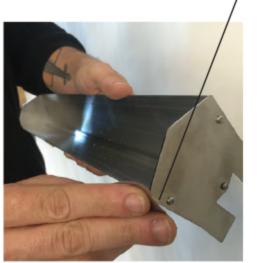



DO NOT USE ROUGH GRIT SAND PAPER TO SAND THE COATING EDGE, FOR THIS USE 400 GRIT SAND PAPER.